

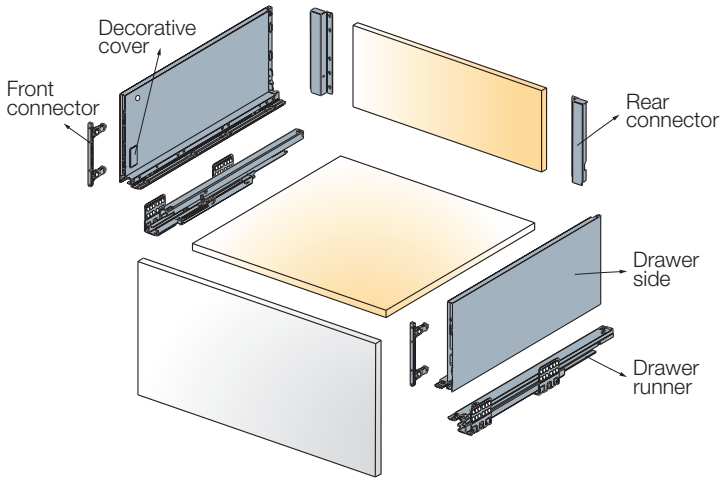
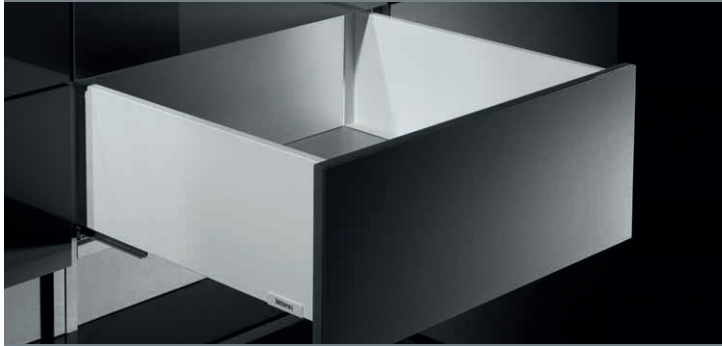



Tekform Slimline Drawer DW182

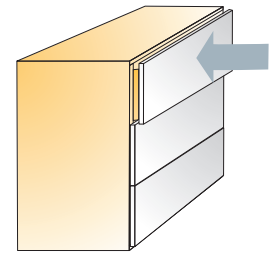

Cutting dimensions details

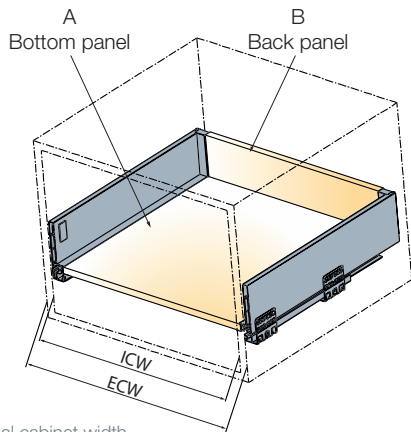

ECW: External cabinet width
ICW: Internal cabinet width
NL: Nominal length of drawer

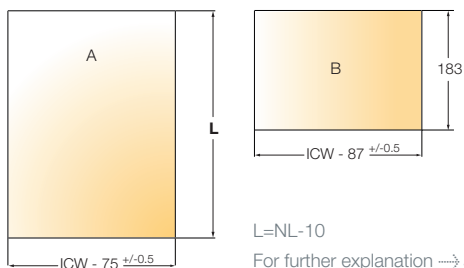

3 sets

Nominal length (mm)	with EasyFix front connector	with Screw-in front connector		
	Item number for a set	Item number for a set	White	Antracite grey

270	655-8Z27 →	655-8H27 →	150	185
300	655-8Z30 →	655-8H30 →	150	185
350	655-8Z35 →	655-8H35 →	150	185
400	655-8Z40 →	655-8H40 →	150	185
450	655-8Z45 →	655-8H45 →	150	185
500	655-8Z50 →	655-8H50 →	150	185
550	655-8Z55 →	655-8H55 →	150	185


One set consists of

Drawer sides		2 pcs
Drawer runners		2 pcs
*Front connectors		2 pcs
Rear connectors		2 pcs
Covers		2 pcs
Mounting instructions		1 pc

Screws are not included

- Drawer runner type
- Load capacity
- Minimum height per drawer required
- Wooden back panel thickness
- Wooden bottom panel thickness

full extension
40kg
230mm
16mm
16mm

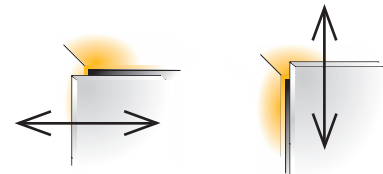

Side adjustment
+1/-1mm


Height adjustment
+2/-2mm

For further explanation → see page 11

Installation dimensions


Drawer runner fixing positions

Minimum space required for the cabinet

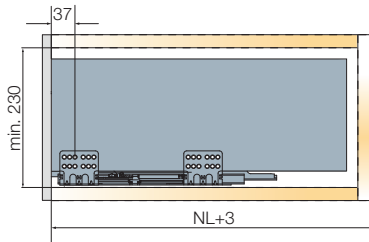


Drilling dimensions for the front panel


EasyFix attachment

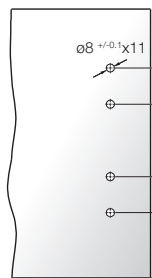




Screw-in attachment

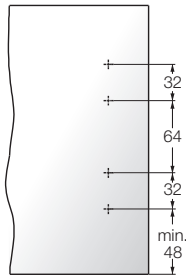

Mounting dimensions for the back panel

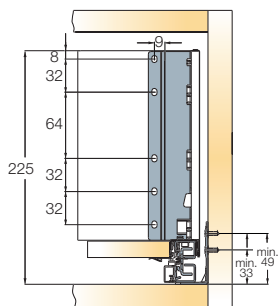

Installation dimensions for the front panel

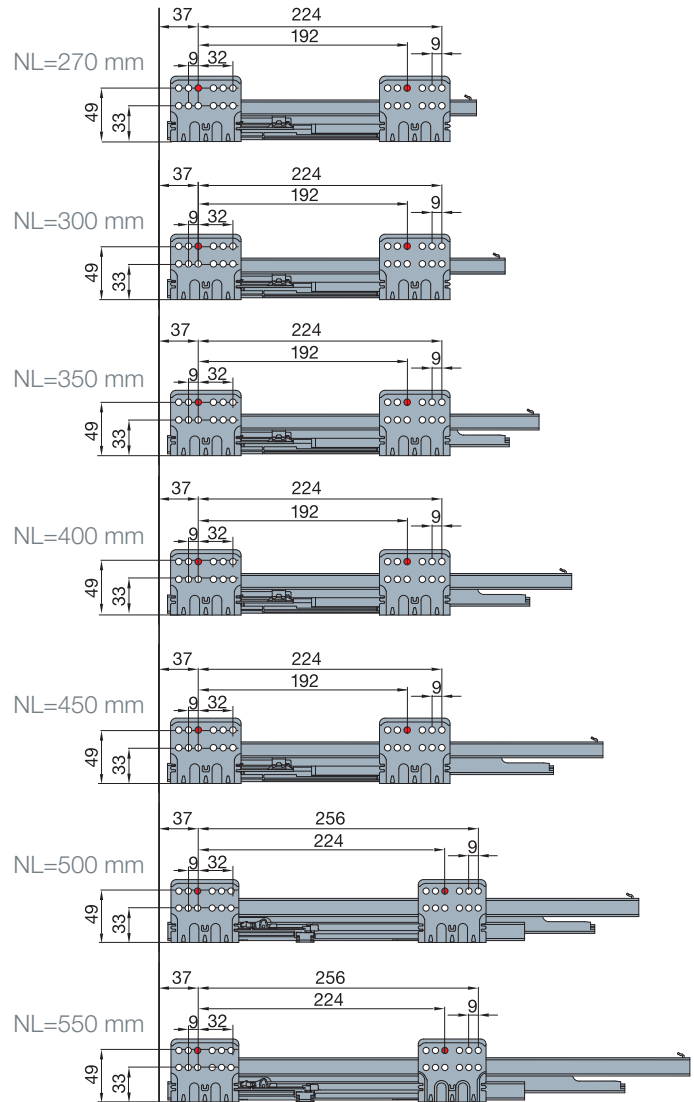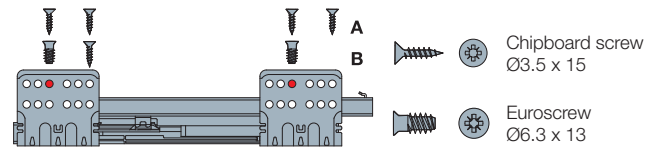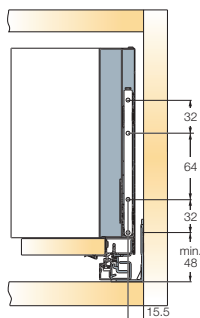

A trial mounting is always recommended.
For further information please contact your
Titus Group representative.